How to decrease the fan noise:

1. Choose “Setting --- About”
2. Choose “Memory Information(used/total)”

--- press the key on the remote control orderly ”OK, left, right, VOL-, VOL+”

3. choose “Factory Menu”
4. choose “Other Options”
5. then set:

Balance Tempreature: 65

Balance PWM: 90

Initial PWM: 70

(pls only set those three option. Attention: please DO NOT set the other option)

1. Choose “ Setting --- About”

2. choose “Memory Information(used/total)”, then press the key on the remote control orderly ”OK, left, right, VOL-, VOL+”

3. choose “Factory Menu”

4. choose “Other Options”

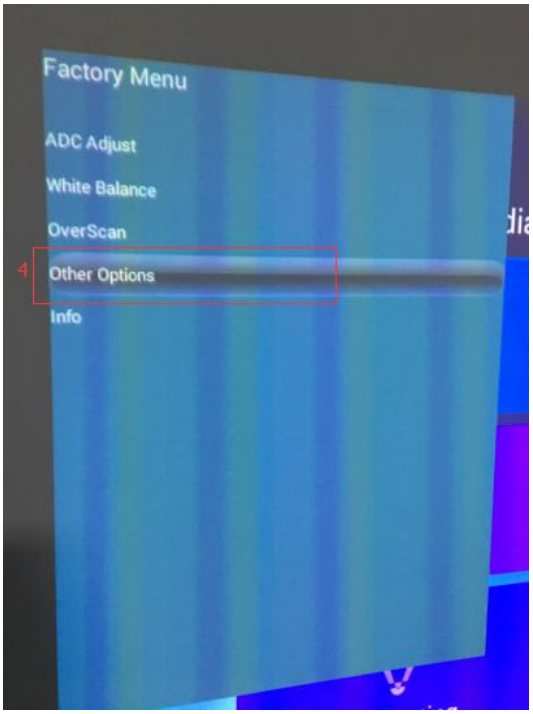

5. then set: **(pls only set those three option).**
Balance Tempreature: 65
Balance PWM: 90
Initial PWM: 70
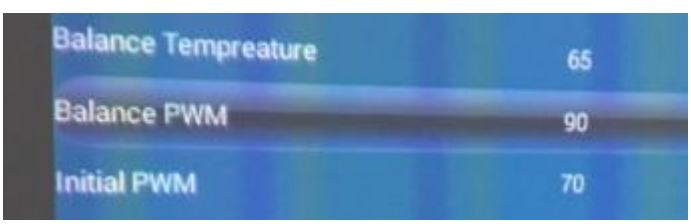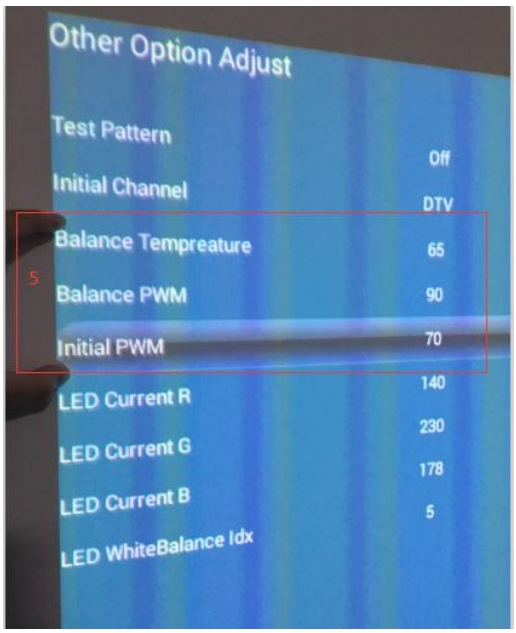
Attention!!! : please DO NOT set the other option, otherwise the pico can’t be fixed.